



# Nikon Coolpix L18 Back Cover Replacement

Replace the Back Cover in your Nikon Coolpix L18.

Written By: Nonny



## INTRODUCTION

In order to reach the internal elements of the camera (LCD screen, motherboard, lens, etc.), the following steps will tell you how to remove the back cover.

 
---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back Cover

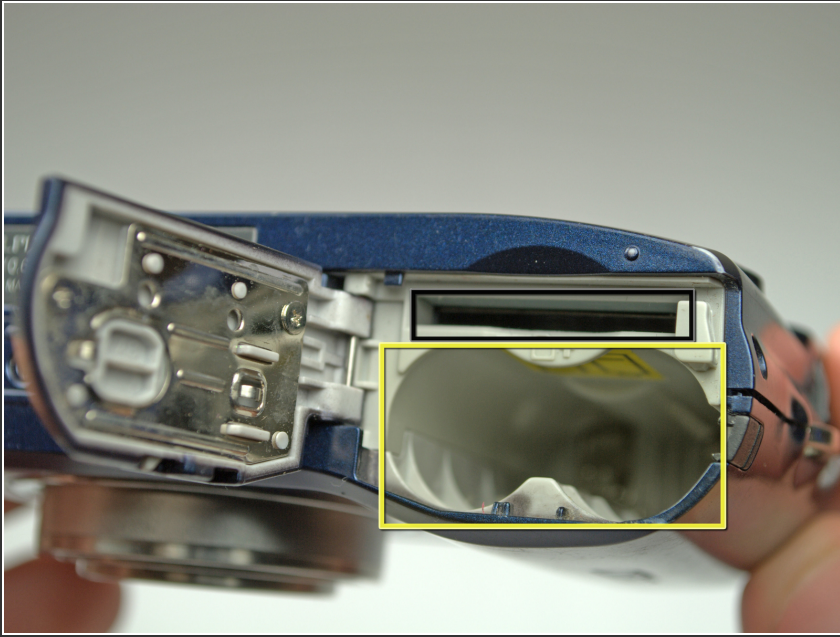

- Remove the memory stick from the camera.
- Remove the batteries from the camera.


## Step 2



 - Remove all six 4.3mm silver screws along the perimeter of the camera using the Phillips #00 screwdriver.
- There is one screw hidden under the AV cover that also needs to be removed.



## Step 3

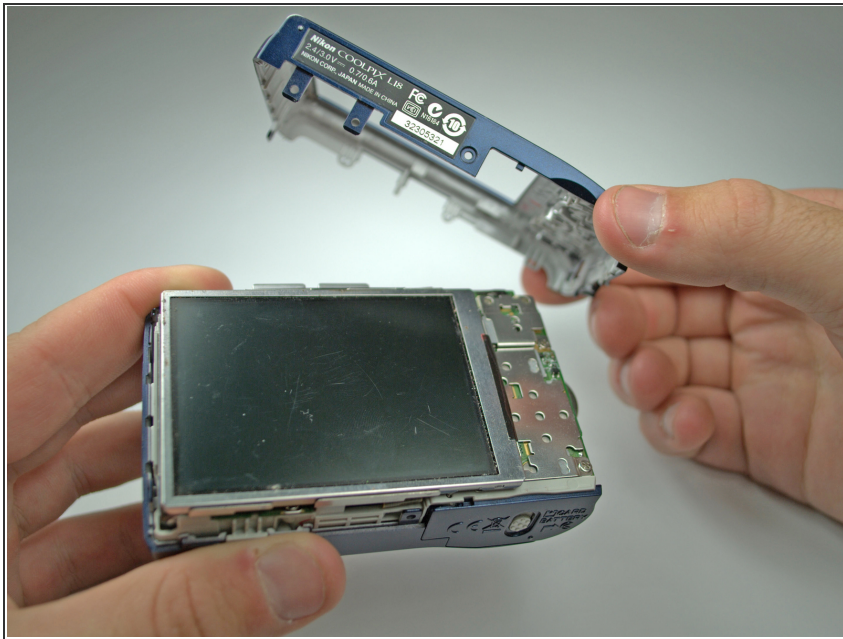

- Pry the back cover from the left side of the camera. Remove the cover gently.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 09:57:05 AM.